

Included :



INSTRUCTIONS

The fabric is cut (remember seam allowance) and 2 cm side seams is sewn. The Velcro tape is sewn to the top of the curtain and a 2.5 cm drawstring is sewn in the bottom, as shown in the drawing.

Pocket tape is attached with approx. 20-25 cm distance across the curtain. The weight is placed in the bottom of the lower drawstring and fiber rods entered in the pocket bands. The curtain with the Velcro strap on top, is attached to the Velcro profile.

Attach a cord eye approx. 5 cm into both ends of the profile , and for every approx. 30-40 cm . Attach the cord lock at the outside of the outer cord eye, in right or left side. Attach the small rings at the bottom, with the same distance as the cord eyes . Now the strings can be mounted. These are tied to the rings at the bottom and be led vertically through the pockets on the tape to the cord eye, and horizontally through the other cord eyes and down through the lock between the steel wheel and the smooth plastic part. Finally the strings is led through the tassel and a knot is tied on the cord so that all the strings are of equal length . This ensures a horizontal pull-up.

Mounting art 1518



1. Put a small piece of cord through the cord lock and pocket in the pocket tape.



2 Tie string ends together in a firm knot.



3. Cut off excess of lead.



4. Put string through the pocket tape and cord lock.




5 Adjust the cord, as usual, through the cord lock until all the strings are straight. The cord will detach from the cord lock if pressure is applied.



Note: Safety cord lock will make sure that cords released from the blind bottom list, will pass through all pocket tape all the way up the curtain.

Mounting art 1454

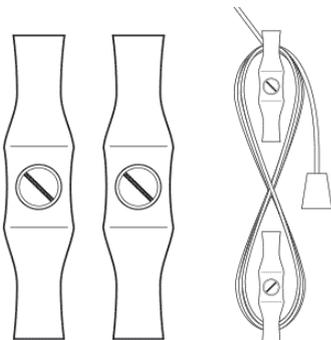

The first string developer must install a minimum of 150 cm from the floor, and there must be at least 10 cm between the two snoviklere.

Children can suffocate if this security product will not be installed. Always use this security product to keep cords and chains out of children's reach.

Instruktion art 3215

Important!
When the cord collector used 2-4 cords, must be one string through both the two round holes.

When the cord collector used having 5 or 6 strings, must be one string through both the two round holes, and 1-2 cords through the oval holes

